

**COMMANDER® PRO
VARIABLE FREQUENCY DRIVE
QUICK REFERENCE GUIDE**

START HERE -

Before you begin, you will want to become familiar with the purpose of the various keys on the key pad. Do not press any of the keys at this time, but first understand what function each key provides.

Key	Function
EDIT	Allows for changes to be made.
UP / DOWN	Scroll up or down to view change selections.
ENTER	Saves changes.
ESCAPE	Discard changes and/or return to the home screen.



Be sure your drive is installed and wired properly per the instruction manual before proceeding.

ENTERING THE PROGRAM MODE

Press and hold the **EDIT** and **ENTER** keys simultaneously for 3-5 seconds to access programming mode.



ENTERING THE FAULT LOG

Press and hold the **UP** and **DOWN** keys simultaneously for 3-5 seconds to access the fault log.



MAXIMUM MOTOR CURRENT CHARTS

MAXIMUM MOTOR CURRENT 3-PHASE (AMP)				
MANUFACTURER	1.5 HP	2.0 HP	3.0 HP	5.0 HP
Franklin	5.9	8.1	10.9	17.8
Grundfos	7.3	8.7	11.6	17.4
Pentek	6.6	8.0	10.1	17.5
CentriPro	6.6	8.0	10.1	17.5

MAXIMUM MOTOR CURRENT 3-WIRE, SINGLE PHASE (AMP)					
MANUFACTURER	0.5 HP	.75 HP	1.0 HP	1.5 HP	2.0 HP
Franklin	6.0	8.0	9.8	11.5	13.2
Grundfos	6.0	8.4	9.8	11.6	13.2
Pentek	6.3	7.9	9.5	11.0	12.2
CentriPro	6.3	7.9	9.5	11.0	12.2
Flint & Walling	6.0	8.0	10.4	11.5	13.2

